

UHF Quad Wireless Headworn Microphone Device WHM U41B

INSTRUCTION & TROUBLESHOOT

- 1) Switch "ON" the transmitter and receiver.
- 2) If the device is paired / synchronised, the LED "BLUE" indicators will stay lighted.
- 3) If the LED indicators are flashing, check whether the battery is flat or the devices are out of range.
- 4) To pair/synchronise the individual channel, switch "ON" the Transmitter (eg. Channel 1). Press & hold the control button until the LED "BLUE" indicator light turn "OFF".

Press & hold the control button again until the LED indicator light turn "ON" & "OFF". Immediately, press 2 times the control button quickly. The LED indicator will be flashing and the transmitter enters into pairing/synchronising mode.

Now, switch "ON" the Receiver set. The Receiver set LED indicator (Channel 1) will flash for a few times and turn "OFF". Press the control button on transmitter, both LED indicators will stay lighted.

This (Channel 1) is paired / synchronised. Repeat the above steps for other channel 2, 3 & 4 if pairing/synchronising is required.



OPERATION NOTES

1. When using, keep the transmitter and receiver at a distance of more than 1 meter.
2. If there is sound feedback, lower the volume of the microphone at the transmitter; do not point the microphone directly at the speaker.
3. Keep the receiver and transmitter powered when using for the first time. If the LED indicators of the transmitter and receiver are always lighted, it means normal use.

NOTE:

NO PAIRING / SYNCHRONISING IS REQUIRED

This device has been successfully paired and tested by manufacturer. It should be connected automatically when switching "ON" both transmitters and receiver set.

LITHIUM BATTERY WARNING !



It is strictly forbidden to be placed in a high temperature environment above 50 degree.

Short circuit and extrusion are strictly prohibited.



It is strictly forbidden to approach the fire source to avoid explosion.

Do not disassemble the battery pack yourself.