
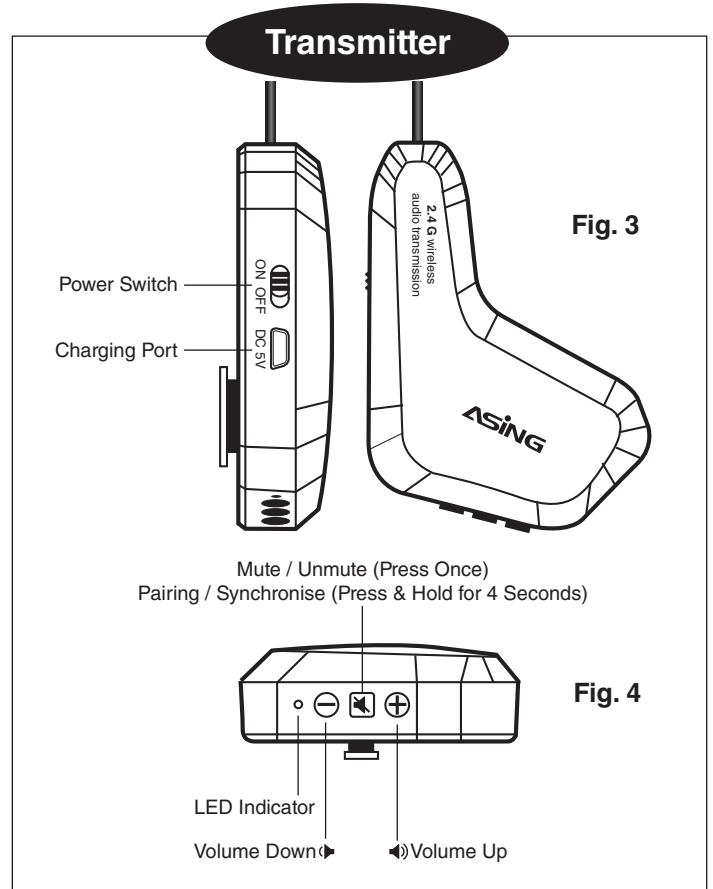


WHM G2401B

2.4G Wireless Voice Enhancement Device

ASiNG

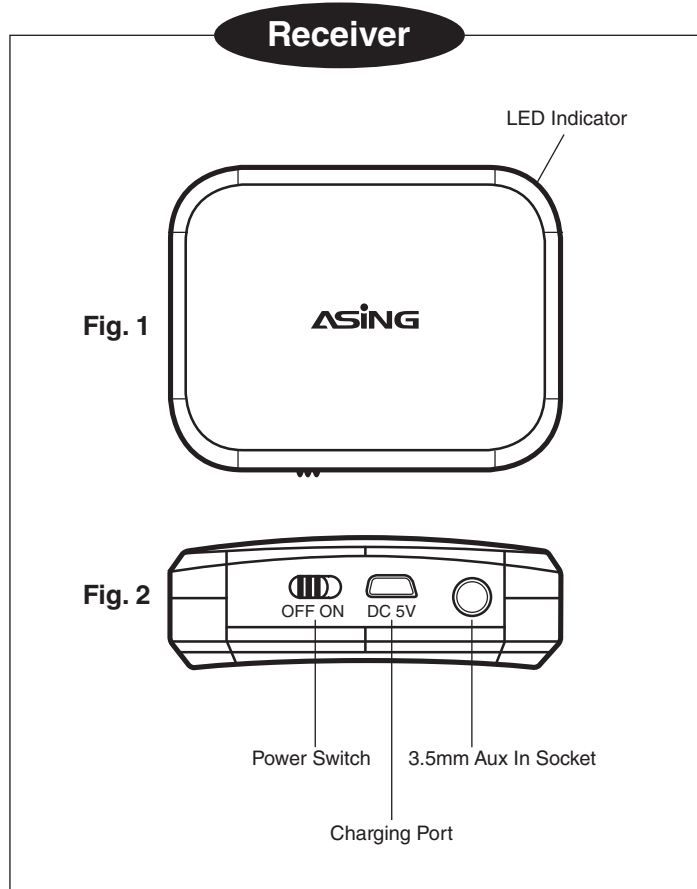


Pairing:

1. Switch "ON" the Transmitter and Receiver.
2. If the device is paired and synchronised, the "BLUE LED" indicators on both device will be steady lighted.
3. If the LED indicators are flashing, check whether the battery is flat or the device are out of range.
4. If both the Transmitter and Receiver LED Indicator are blinking, place both devices near to each other (within 10cm). Press and hold the "MUTE" button on transmitter for 4 seconds to pair / synchronise the devices. (Fig. 4)

How to Operate:

Option A - Connect to Patch Panel

1. Switch "ON" the Transmitter and Receiver.
2. Check the "BLUE LED" indicators on both device, make sure they are Paired or Synchronised.
3. If both Transmitter and Receiver LED Indicator are blinking, go to step 4 to re-pair / re-synchronise the device.
4. Press the "Volume Down" button on the Transmitter "7 times" to switch off the Transmitter volume, then press the "Volume Up" button "2 times" to set the volume to level 2. (This is to minimize the chances of getting a feedback sound when device is being used under the speaker)
5. Connect the Receiver to the "Mic" port on the Patch Panel (Do not switch "ON" the Patch Panel.)
6. Switch the volume of the patch panel to "zero".
7. Then power "ON" the patch panel and slowly increase the volume to desired level.

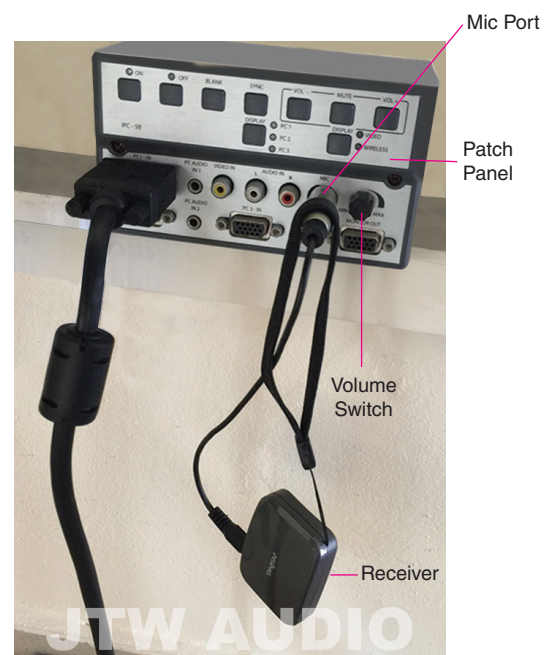

Option B - Connect to Wireless Waist Speaker

Follow Option A, point 1 to 4

5. Connect the Receiver to the "Mic In" jack on the Waist Speaker. (Do not switch "ON" the Waist Speaker.)
6. Switch the volume of the Waist Speaker to "zero".
7. Then power "ON" the Waist Speaker and slowly increase the volume to desired level.

